


T/F BLOW BACK STRUT

9-1-00

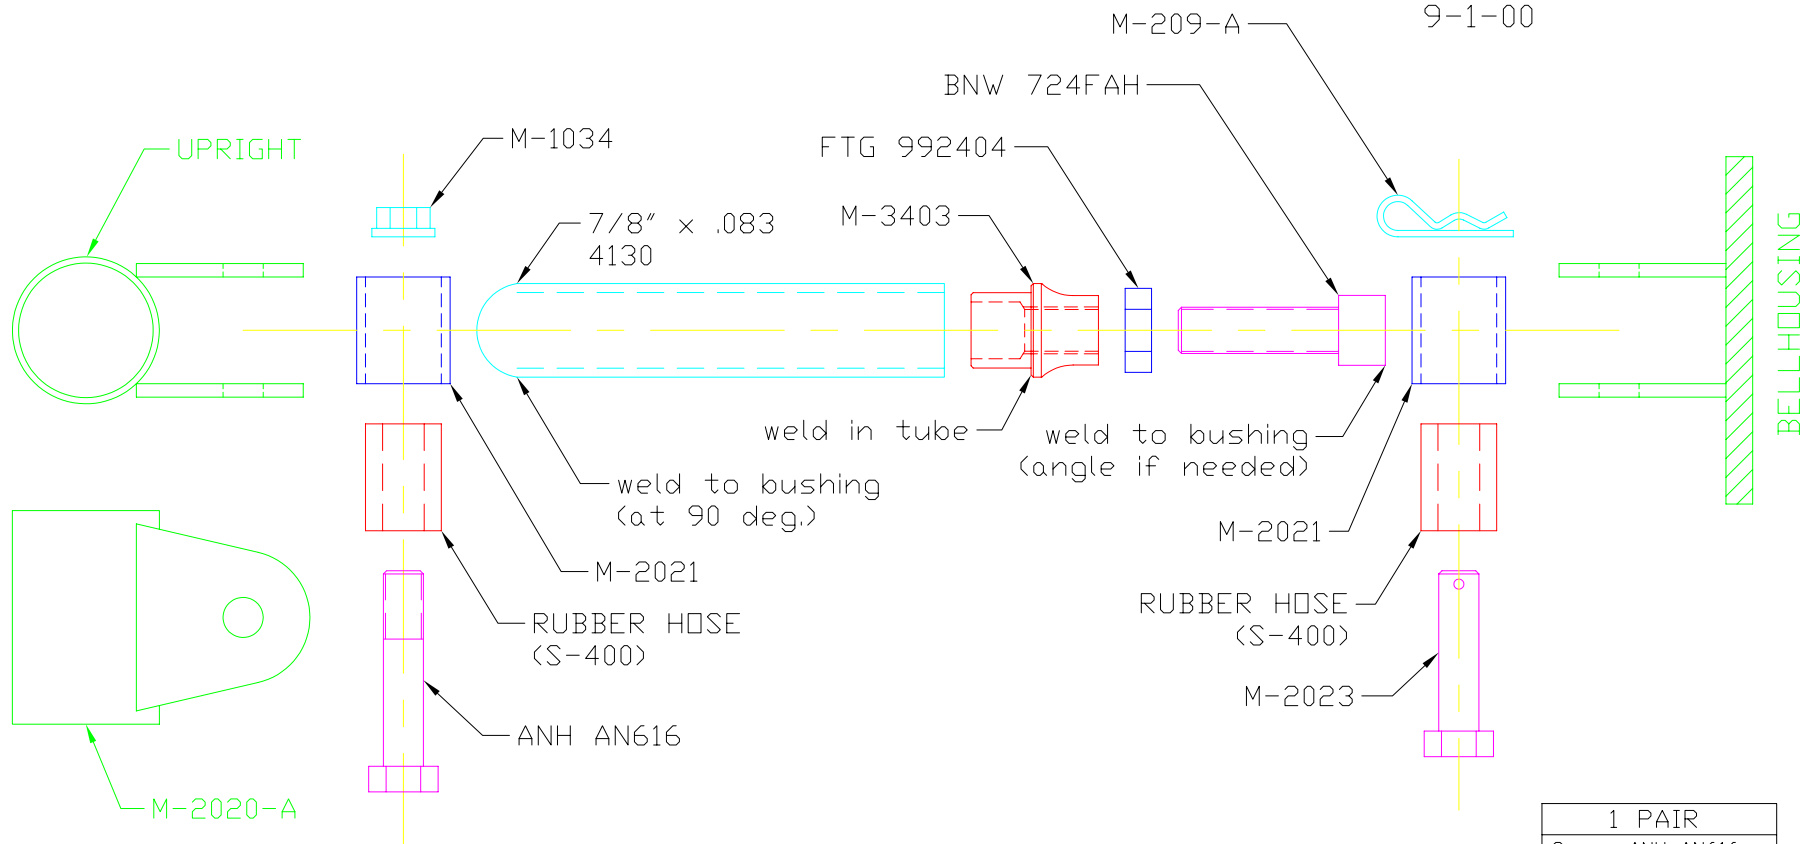

It is best to use 724FAH and M-2021 at the Bellhousing, due to the fact the angle of the bellhousing may not be parallel to the tabs welded onto the upright. After welding bushings, clean inside of the bushing so rubber hose will go in easier. Chamfer one end of hose on belt sander and twist hose as you are pushing it into the bushing. Cut off excess with a utility knife. Drill hose with a 25/64" bit. This is one size over so the hose can expand and the bolt will still slide easily through.

1 PAIR	
2	- ANH AN616
2	- BNW 724FAH
2	- MCK M-1034
4	- MCK M-2021
2	- MCK M-2023
2	- MCK m-209-A
2	- MCK M-3403
2	- FTG 992404
2	- SUP S-400
12"	- TUB 14834130